



Assembly Instructions

Cottage Size Weathervane

WEATHERVANE ASSEMBLY

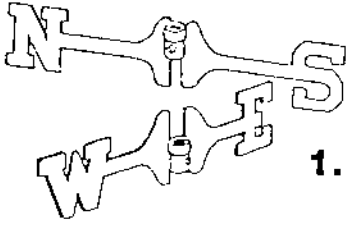

1. INTERLOCK DIRECTIONALS

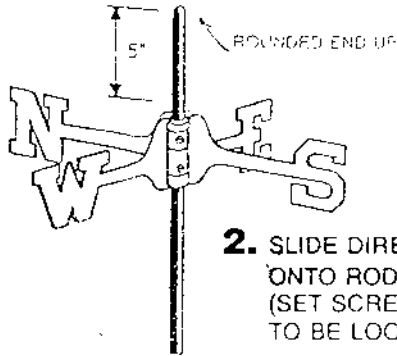


2. SLIDE DIRECTIONALS ONTO ROD 5" FROM TOP (SET SCREWS MAY NEED TO BE LOOSENED)

3. TIGHTEN SCREWS ON DIRECTIONALS

COPPER BOTTOM OF WEATHERVANE -



4. SLIDE WEATHERVANE ONTO ROD

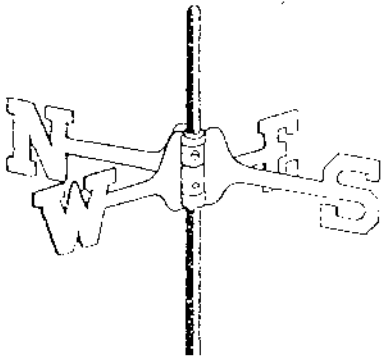

4A.

SLIDE WEATHERVANE AND RETAINING HOOK* ONTO ROD SIMULTANEOUSLY

COPPER BOTTOM OF WEATHERVANE -



TIGHTEN SET SCREW.

RETAINING HOOK -



* Retaining hook included with & required for 3-dimensional figures only.

YOUR PACKAGE INCLUDES:

- | | |
|-------------------------|--------------------------------|
| 1 Weathervane Figure | 1 Set of Brass Directionals |
| 1 Weathervane Steel Rod | 1 Retaining Hook (if required) |

Colonial Collections
of New England, Inc.

