


# Roof Mount Installation

## Full Size Weathervane



### TOOLS NEEDED

- Silicon Caulk
- Caulking Gun
- Drill & 3/32" Bit
- Phillips Head Screwdriver
- Adjustable Wrench
- Small Level

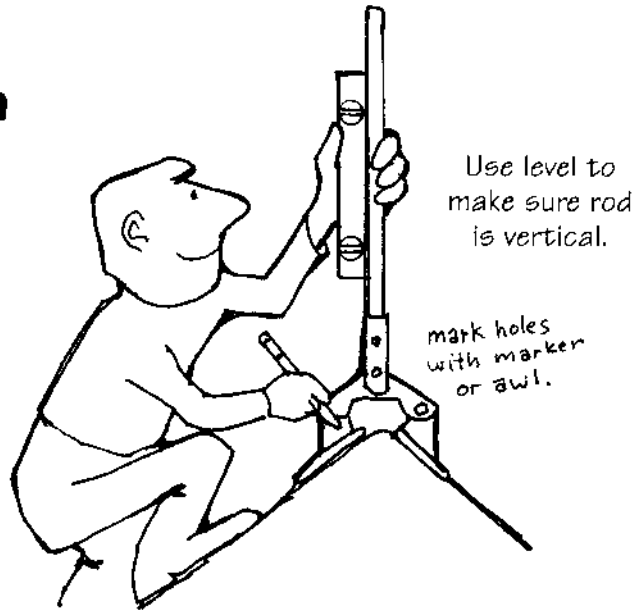

Check rod for plumb (use level). Drill 3/32" holes using roof mount as template. Fill holes with caulk and drive in 2 1/2" screws supplied.

Insert Iron Weathervane Rod. Turn "N" Towards North. Tighten Set Screws.

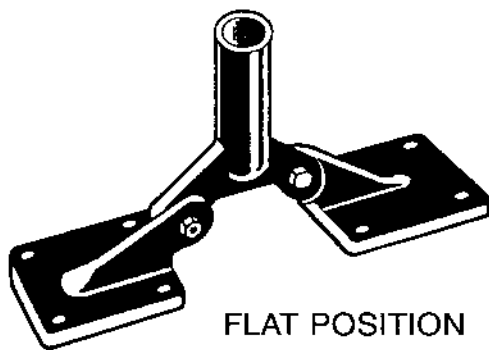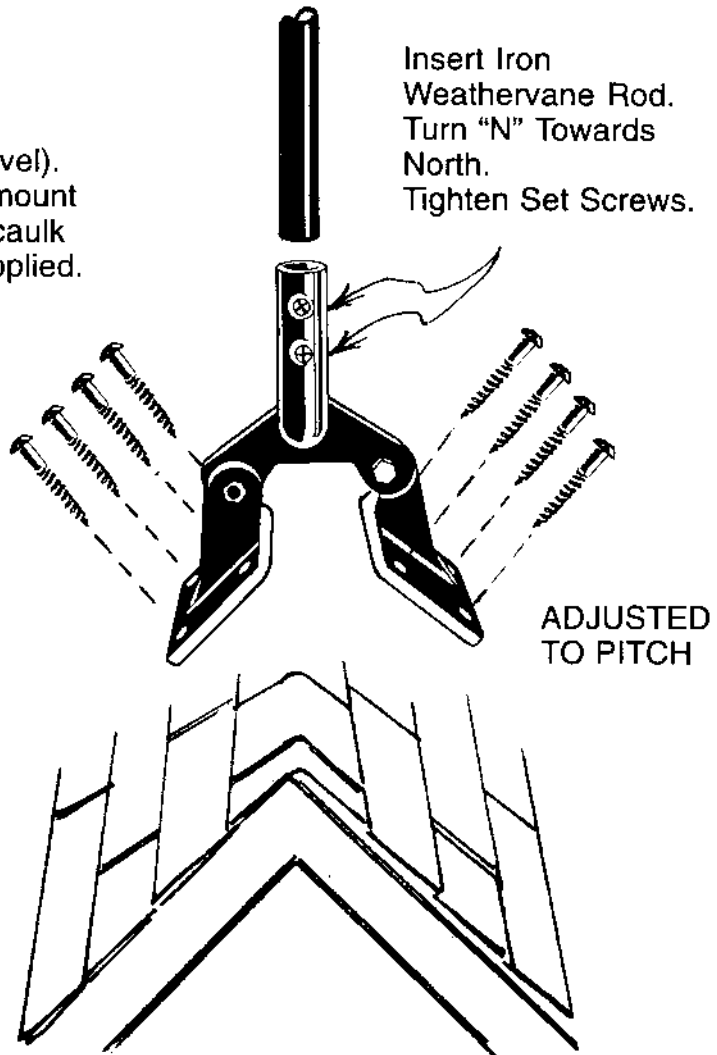

**CAUTION:**  
Work on top of a roof requires extreme caution. If you are not qualified to do this installation, we recommend you consult a professional builder.

**Colonial  
Collections**  
of New England, Inc.